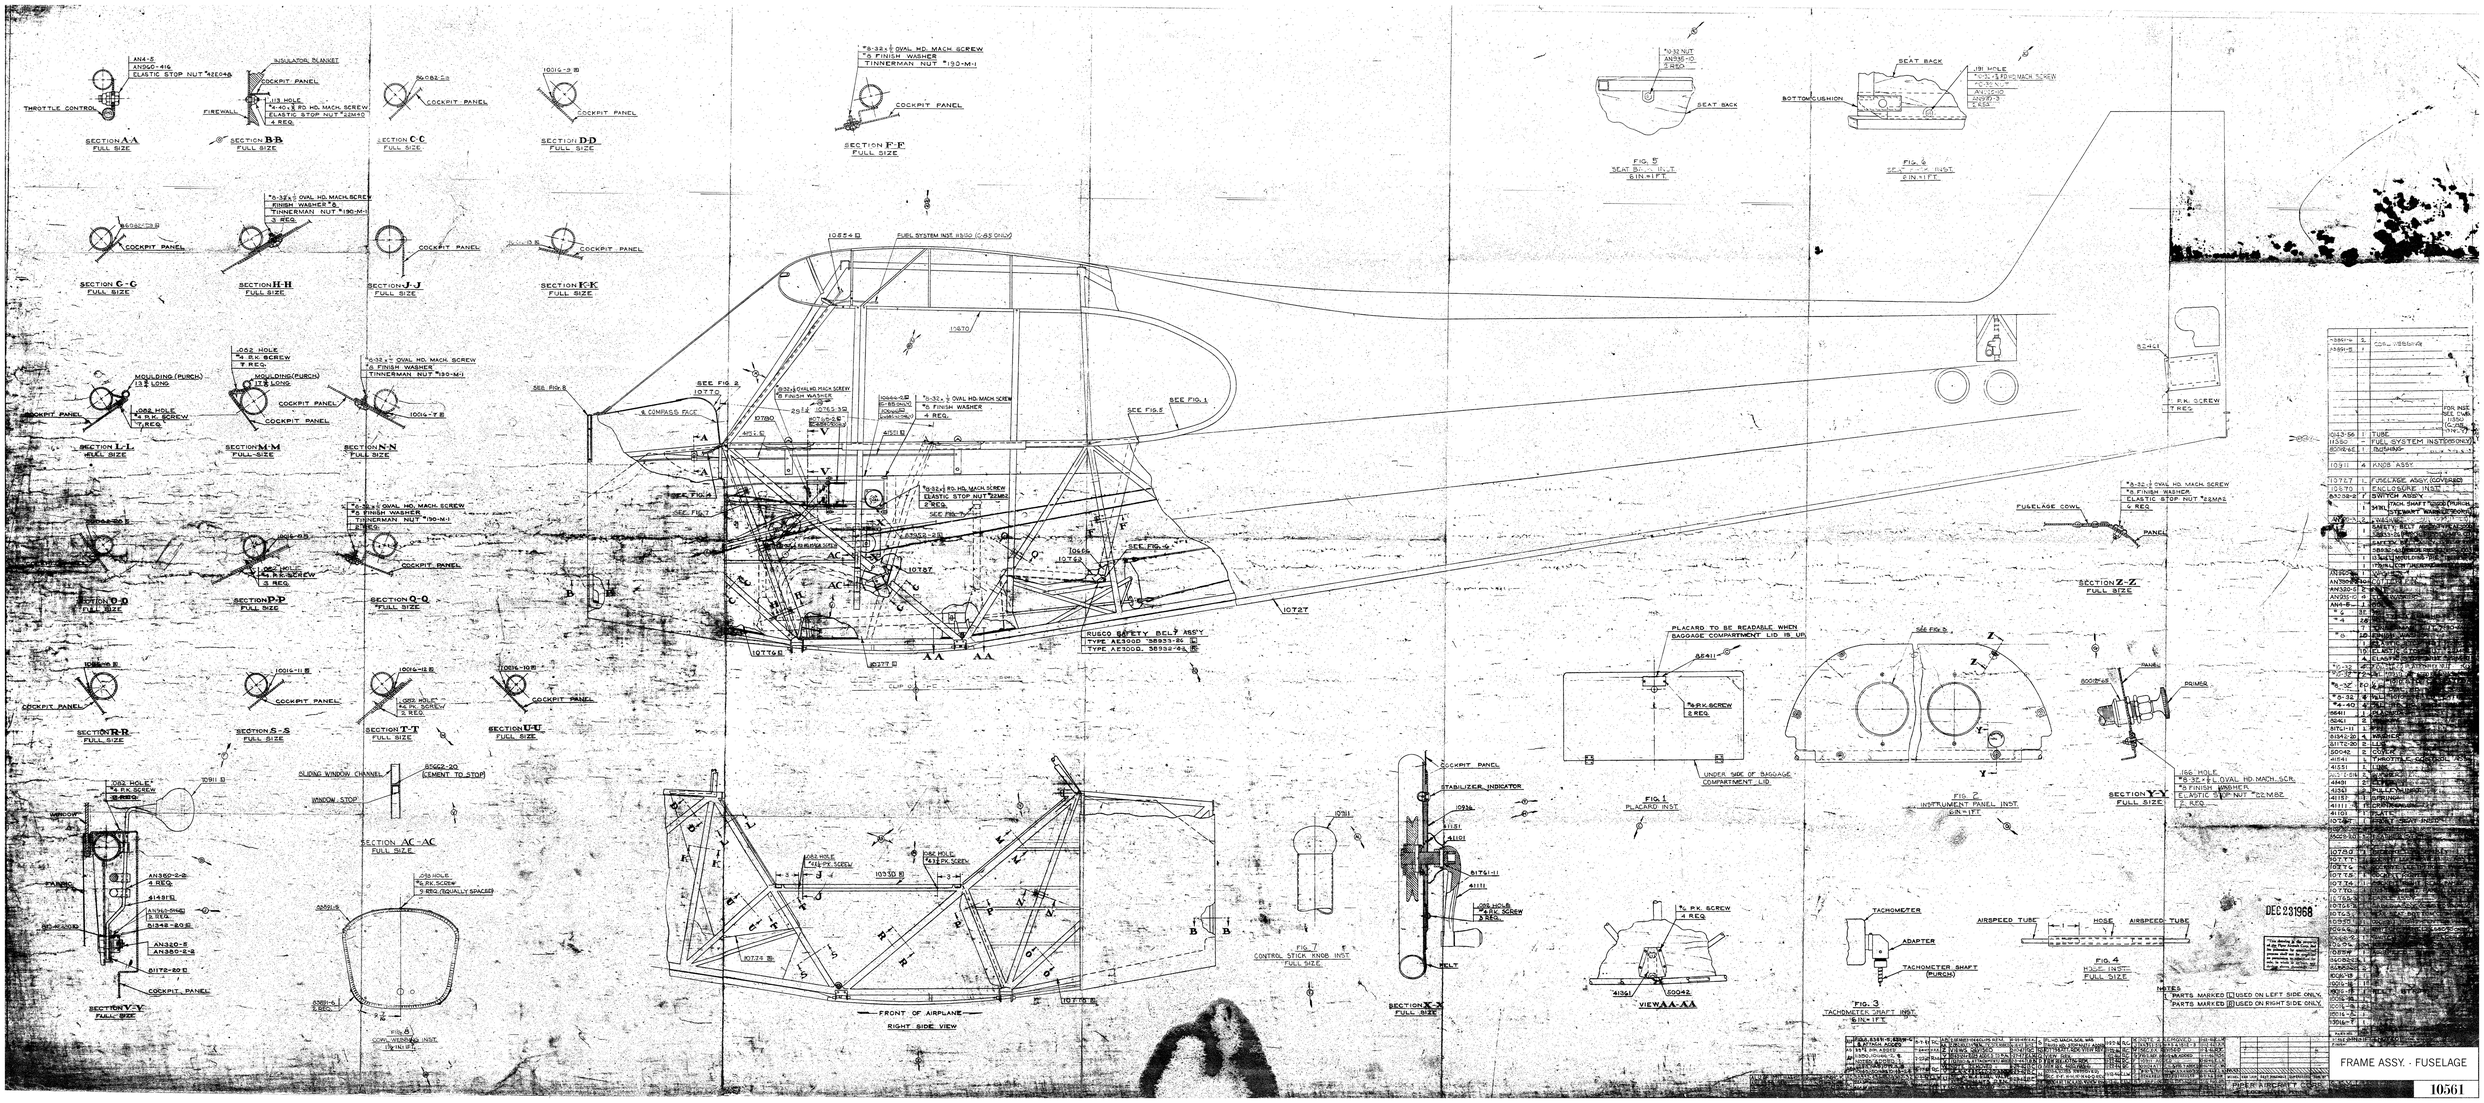
SECTION A-A FULL SIZE
SECTION B-B FULL SIZE
SECTION C-C FULL SIZE
SECTION D-D FULL SIZE
SECTION E-E FULL SIZE
SECTION F-F FULL SIZE
SECTION G-G FULL SIZE
SECTION H-H FULL SIZE
SECTION J-J FULL SIZE
SECTION K-K FULL SIZE
SECTION L-L FULL SIZE
SECTION M-M FULL SIZE
SECTION N-N FULL SIZE
SECTION O-O FULL SIZE
SECTION P-P FULL SIZE
SECTION Q-Q FULL SIZE
SECTION R-R FULL SIZE
SECTION S-S FULL SIZE
SECTION T-T FULL SIZE
SECTION U-U FULL SIZE
SECTION V-V FULL SIZE
SECTION W-W FULL SIZE
SECTION X-X FULL SIZE
SECTION Y-Y FULL SIZE
SECTION Z-Z FULL SIZE
SECTION AC-AC FULL SIZE
FIG. 5 SEAT BACK INSTL. 6 IN = 1 FT
FIG. 6 SEAT BOTTOM INSTL. 6 IN = 1 FT
FIG. 1 PLACARD INST.
FIG. 2 INSTRUMENT PANEL INST. 6 IN = 1 FT
FIG. 3 TACHOMETER INST. 6 IN = 1 FT
FIG. 4 HOSE INST. FULL SIZE
FIG. 7 CONTROL STICK KNOB INST. FULL SIZE
FIG. 8 COWL WINDSHIELD INST. 12 IN = 1 FT
VIEW AA-AA
FRONT OF AIRPLANE
RIGHT SIDE VIEW
RUSCO SAFETY BELT ASSY
TYPE AE3500 58833-85 LH
TYPE AE3000 58932-85 RH
PLACARD TO BE READABLE WHEN BAGGAGE COMPARTMENT LID IS UP
UNDER SIDE OF BAGGAGE COMPARTMENT LID
FUSELAGE COWL
PANEL
PRIMER
THROTTLE CONTROL
FIREWALL
INSULATION BLANKET
COCKPIT PANEL
STABILIZER INDICATOR
SEAT BACK
BOTTOM CUSHION
TACHOMETER
ADAPTER
TACHOMETER SHAFT (PUSH)
AIRSPEED TUBE
HOSE
AIRSPEED TUBE
FUEL SYSTEM INST. #1350 (C-85 ONLY)
SEE FIG. 1
SEE FIG. 2
SEE FIG. 3
SEE FIG. 4
SEE FIG. 5
SEE FIG. 6
SEE FIG. 7
SEE FIG. 8
SEE PAR. 8
& COMPASS FACE
DEC 23 1968
FRAME ASSY. - FUSELAGE
10561